




**PARAMOUNT**  
Industries, Incorporated

# SUGGESTED MOUNTING FOR A9 MINILUX<sup>®</sup> luminaires

1. Remove lens by pulling firmly on one end.
2. Remove reflector/ballast cover by removing three (3) screws.
3. Mounting holes are not provided. The contractor must determine location and optimum position and mount as needed.
4. Make all necessary wiring connections.
5. Replace reflector/ballast cover, lamp(s) and lens.

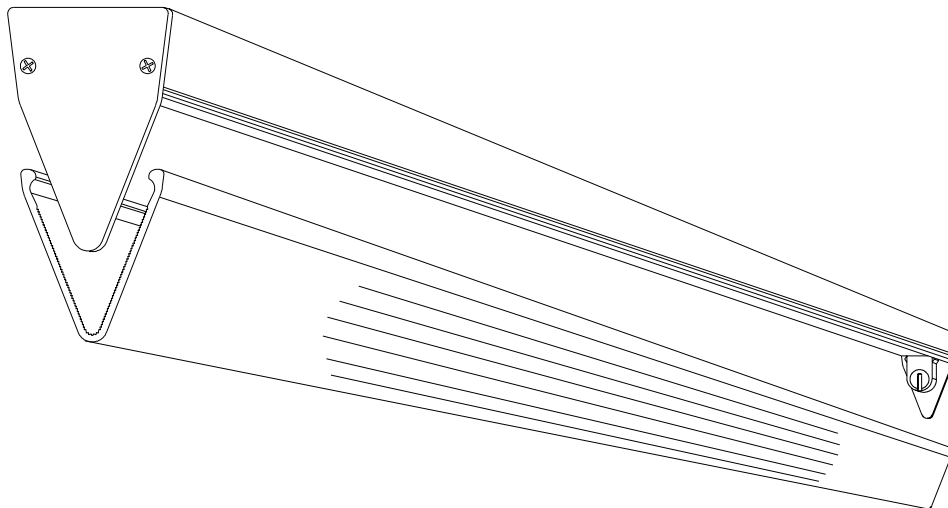

**Cleaning Instructions:** Wipe luminaire with a soft cloth slightly dampened with warm, soapy water. On stainless steel units, tightly adhering deposits may be removed by using a stainless steel polishing powder. Never use steel wool or steel brushes on stainless steel. Always rub in the directions of the polish lines.

**Note:** All luminaires to be installed by a qualified electrician.  
Mounting and electrical hardware not supplied by Paramount Industries unless otherwise noted.

REV 10/03