




SUGGESTED MOUNTING FOR H3 LOW PROFILE SQUARE

SURFACE

1. Remove lens frame assembly by loosening all captive screws and squeezing the two (2) safety wire hinges or unclip two (2) safety snells.
2. Remove reflector by loosening and removing nuts.
3. Mount luminaire to ceiling utilizing four (4) mounting holes provided.
4. Make all necessary wiring connections.
5. Replace reflector, install lamp and lens assembly.

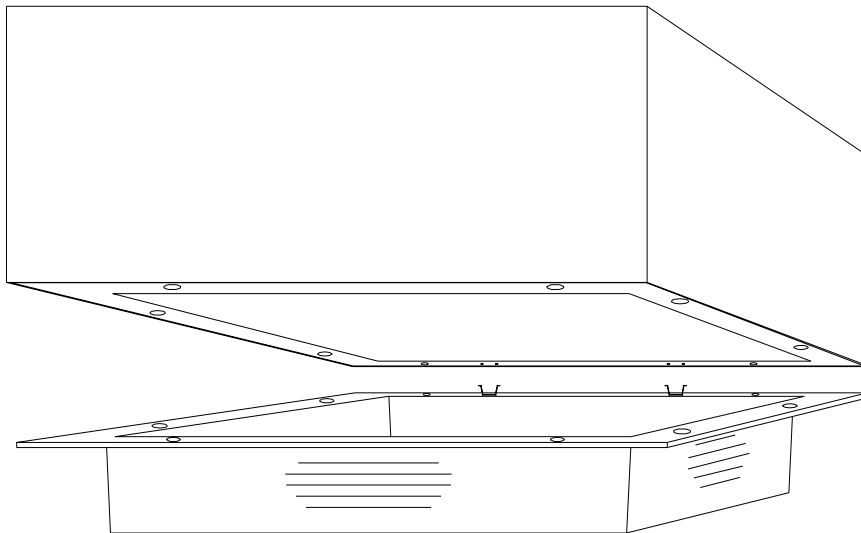

Cleaning Instructions: Wipe luminaire with a soft cloth slightly dampened with warm, soapy water. On stainless steel units, tightly adhering deposits may be removed by using a stainless steel polishing powder. Never use steel wool or steel brushes on stainless steel. Always rub in the directions of the polish lines.

Note: All luminaires to be installed by a qualified electrician.
Mounting and electrical hardware not supplied by Paramount Industries unless otherwise noted.