




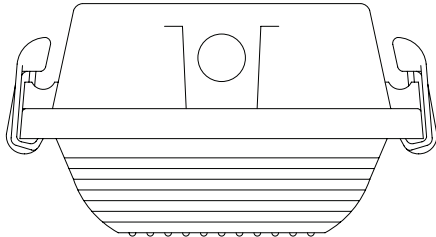


SUGGESTED MOUNTING FOR L1A, L1B TUFF LITE

L1A, L1B IP65 Models





L1A, L1B IP67 Models

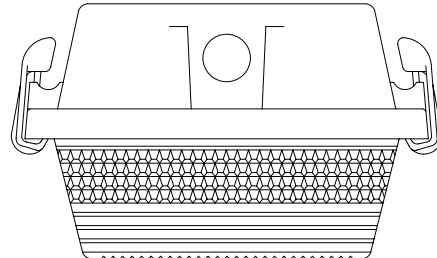

SURFACE MOUNTING

1. Unsnap mounting bracket from luminaire and mount to surface as required.
2. Remove lens by opening latches.
3. Remove reflector by turning the two (2) quarter-turn fasteners.
4. Snap housing on mounting brackets.
5. Make all necessary wiring connections.
6. Replace reflector, lamp(s) and secure lens back to luminaire.

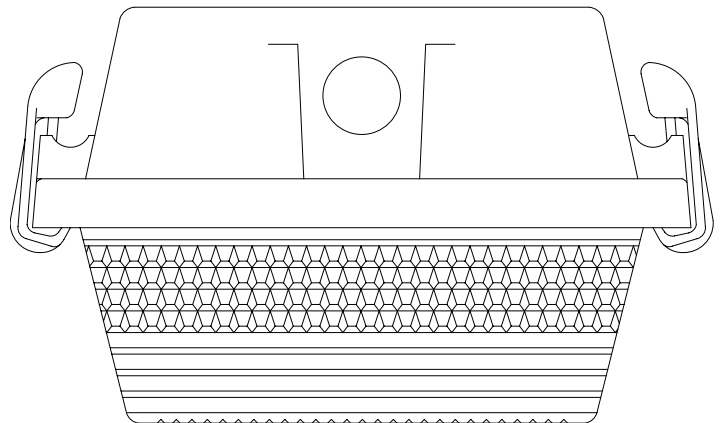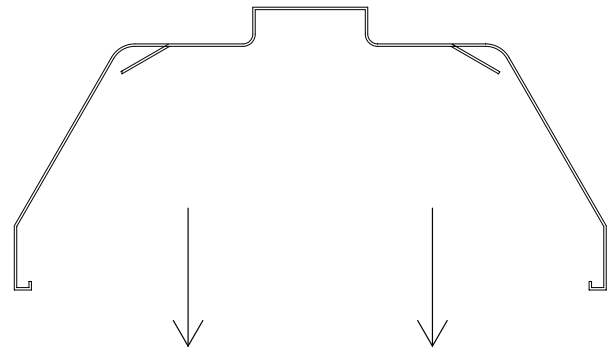

Cleaning Instructions: Wipe luminaire with a soft cloth slightly dampened with warm, soapy water. On stainless steel units, tightly adhering deposits may be removed by using a stainless steel polishing powder. Never use steel wool or steel brushes on stainless steel. Always rub in the directions of the polish lines.

Note: All luminaires to be installed by a qualified electrician.
Mounting and electrical hardware not supplied by Paramount Industries unless otherwise noted.