



SUGGESTED MOUNTING FOR **CORNER LITES** Series K0, K7, K8



GENERAL:

1. Before starting the installation, make sure all electricity has been turned off and electrical breaker has been locked out and tagged out.
2. To ensure the success of the installation, be sure to read these instructions and review the diagrams thoroughly before beginning.
3. All electrical connections must be in accordance with local codes, ordinances, or the National Electrical Code.
4. All luminaires to be installed by a qualified electrician.

NOTE: The important safeguards and instructions appearing in this manual are not meant to cover all possible conditions and situations that may occur.

INSTALLATION

1. Open luminaire by loosening all captive screws and removing lens assembly by squeezing the two (2) wire hinges or unclipping the two (2) safety snells, whichever is being used.
2. Remove the reflector by turning the two (2) quarter-turn fasteners.
3. Mount luminaire utilizing four (4) mounting holes.
4. Make all necessary wiring connections.
5. Replace reflector, reattach wire hinges or safety snells and secure lens assembly.

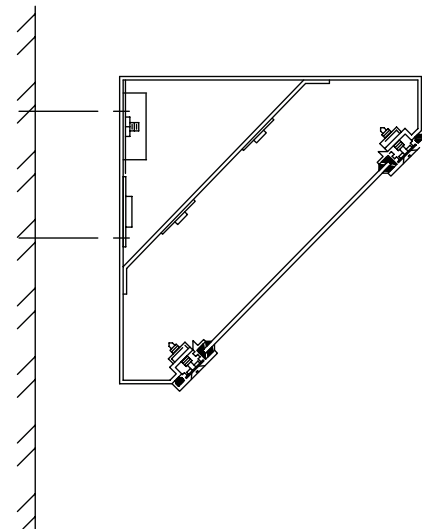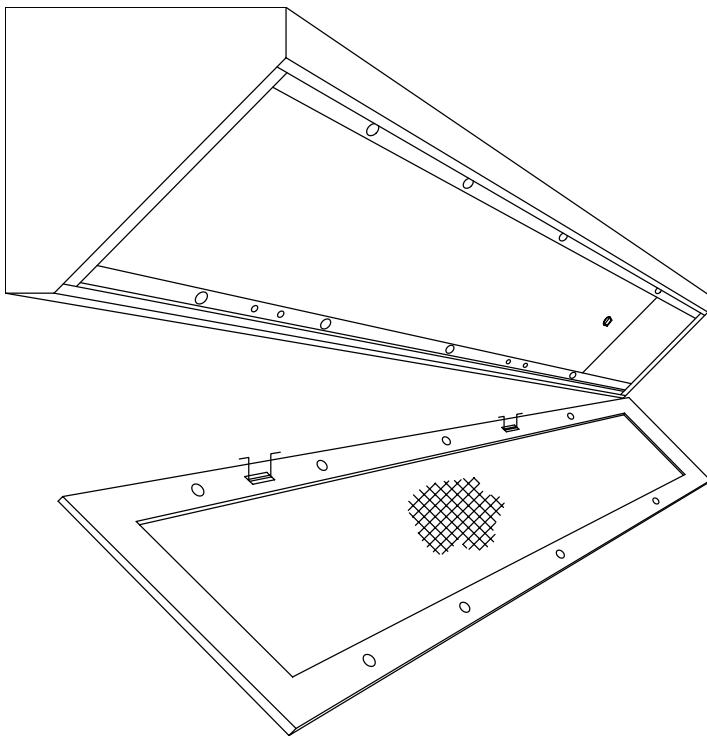

Cleaning Instructions: Wipe luminaire with a soft cloth slightly dampened with warm, soapy water. On stainless steel units, tightly adhering deposits may be removed by using a stainless steel polishing powder. Never use steel wool or steel brushes on stainless steel. Always rub in the direction of the polish lines.

Mounting and electrical hardware not supplied by Paramount Industries unless otherwise noted.

iiPMK0K7K8