



# **SUGGESTED MOUNTING FOR** **K1 CORNER LITES** *Series K1*

## **GENERAL:**

1. Before starting the installation, make sure all electricity has been turned off and electrical breaker has been locked out and tagged out.
2. To ensure the success of the installation, be sure to read these instructions and review the diagrams thoroughly before beginning.
3. All electrical connections must be in accordance with local codes, ordinances, or the National Electrical Code.
4. All luminaires to be installed by a qualified electrician.


**NOTE:** The important safeguards and instructions appearing in this manual are not meant to cover all possible conditions and situations that may occur.

## **INSTALLATION**

### **SURFACE**


1. Loosen captive screws and open luminaire.
2. Remove reflector/ballast cover by turning two (2) quarter-turn fasteners.
3. Mount to surface utilizing four (4) mounting holes provided.
4. Make all necessary wiring connections.
5. Replace reflector/ballast cover, install lamp(s) and secure lens frame.

H.O. MODELS require 1-1/2" spacing from mounting surface (Brackets supplied).

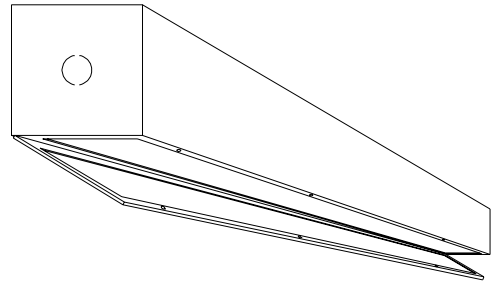

### **PENDANT**

1. Loosen captive screws and open luminaire.
2. Remove reflector/ballast cover by turning two (2) quarter-turn fasteners.
3. Mount to pendants.
4. Make all necessary wiring connections.
5. Replace reflector/ballast cover, install lamp(s) and lens frame.

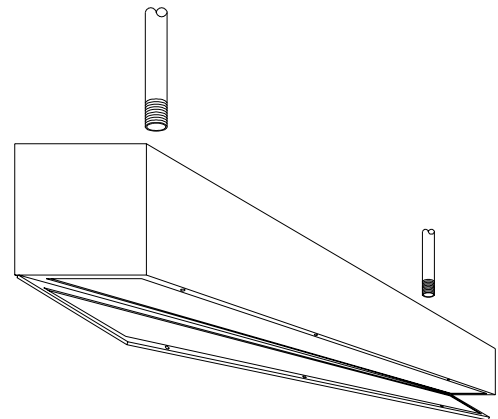

**Cleaning Instructions:** Wipe luminaire with a soft cloth slightly dampened with warm, soapy water. On stainless steel units, tightly adhering deposits may be removed by using a stainless steel polishing powder. Never use steel wool or steel brushes on stainless steel. Always rub in the direction of the polish lines.

*Mounting and electrical hardware not supplied by Paramount Industries unless otherwise noted.*

iiPMK1