

## PMVRL13R0 - 13" Round, Low Profile - INSTALLATION INSTRUCTIONS

CAUTION: BEFORE CONNECTING THE FIXTURE TO A POWER SUPPLY, MAKE SURE THE POWER IS SWITCHED OFF.




corporate  
t 800.521.5405  
f 800.852.7154  
3625 Swenson Ave.  
St. Charles, IL 60174

### GENERAL:

1. Before starting the installation, make sure all electricity has been turned off and electrical breaker has been locked out and tagged out.
2. To ensure the success of the installation, be sure to read these instructions and review the diagrams thoroughly before beginning.
3. All electrical connections must be in accordance with local codes, ordinances, or the National Electrical Code.
4. These fixtures are intended to be mounted directly to the building structure, over the electrical junction box or conduit outing.
5. All luminaires to be installed by a qualified electrician.

*NOTE: The important safeguards and instructions appearing in this manual are not meant to cover all possible conditions and situations that may occur.*


### DETAILED ILLUSTRATION

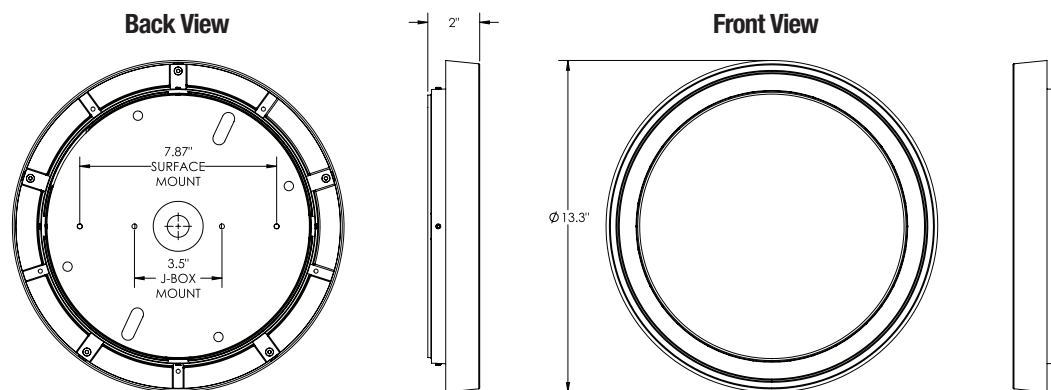

### INSTALLATION

1. Remove Back Cover by loosening (4) Set Screws and mount to J-Box or Surface with Mounting Screws (provided by others).
2. Connect ground, power, and dimming wires to source with wirenuts (provided by others).
3. Secure Front Cover by tightening (4) Set Screws.
4. Installer **MUST** add a bead of silicone caulk where edges of Fixture meets the mounting surface top and sides to avoid water seepage (not bottom).

**IMPORTANT:** Failure to properly seal fixture to surface may result in nullifying the warranty and IP66 rating.

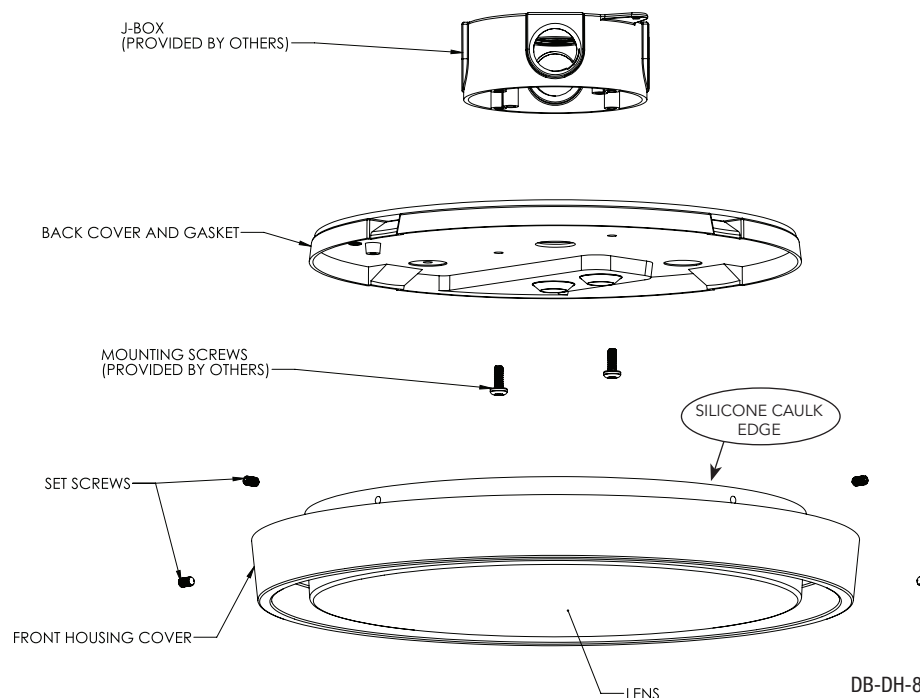

### CONFIDENTIAL

THIS DOCUMENT IS THE PROPRIETARY PROPERTY OF PARAMOUNT INDUSTRIES. ANY UNAUTHORIZED TRANSFER, USE OR REPRODUCTION IS STRICTLY PROHIBITED.

DB-DH-81621

iiPMVRL13R0

© PARAMOUNT INDUSTRIES