PMVRSW7 Stairwell Light - INSTALLATION INSTRUCTIONS

CAUTION: BEFORE CONNECTING THE FIXTURE TO A POWER SUPPLY. MAKE SURE THE POWER IS SWITCHED OFF.





corporate

t 800.521.5405

f 800.852.7154 3625 Swenson Ave. St. Charles, IL 60174

DETAILED ILLUSTRATIONS

- 1. Before starting the installation, make sure all electricity has been turned off and electrical breaker has been locked out and tagged out.
- 2. To ensure the success of the installation, be sure to read these instructions and review the diagrams thoroughly before beginning.
- 3. All electrical connections must be in accordance with local codes, ordinances, or the National Electrical Code.
- 4. These fixtures are intended to be mounted to a J-Box directly supported by the building structure.
- 5. All luminaires to be installed by a qualified electrician.


NOTE: The important safeguards and instructions appearing in this manual are not meant to cover all possible conditions and situations that may occur.


INSTALLATION


GENERAL:

- 1. Attach baseplate to J-Box (Checking for level position). Orient "TOP" upwards.
- 2. Attach wires from power source into fixture. IMPORTANT: Make sure all connections follow code requirements.
- 3. Locate the hooks on the bottom of the baseplate. Place them into the slots on the backside of the top cover.
- 4. Attach the safety carabiner from the top-cover to the baseplate. See Illustration 4 below.
- 5. Connect wires from power source to top-cover.
- Gently rotate the top cover into position with the baseplate, so that the two holes at the top align.
- 7. Fasten the Locking Screw into place

IMPORTANT: All FC | SSL products can be cleaned with non-abrasive and chemical free agents. Use a soft cloth with mild detergent on exterior only.

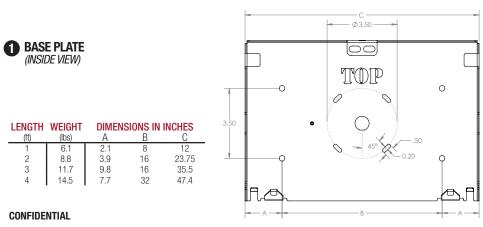

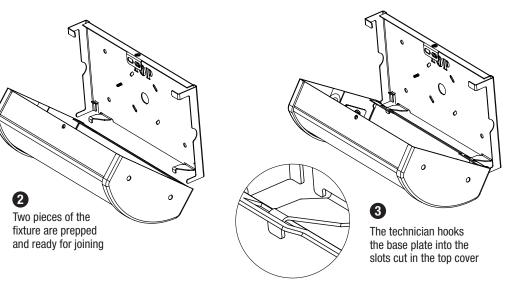

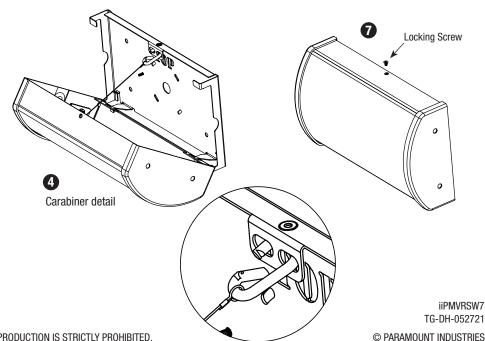

THIS DOCUMENT IS THE PROPRIETARY PROPERTY OF PARAMOUNT INDUSTRIES. ANY UNAUTHORIZED TRANSFER, USE OR REPRODUCTION IS STRICTLY PROHIBITED.